

Thermal DESIGNS®

1880 South Flatiron Ct. Boulder, CO 80301 866-442-3485 www.thermaldesignsinc.com sales@thermaldesignsinc.com

Installation Instructions for Sunshine Rooms Motorized Shades With Remote Control

REMOVE

RIDGE COVERS

CLEAN TRACK


WITH FOAM BRUSH

1: Install the Shades

 Shades are labelled in alpha order left to right, inside looking out, unless they are all the same size.



- Clean out track with foam brush provided.
- Remove ridge cover plates and plugs from 1" holes in glazing bars near ridge.
- For each shade, install a velstick strip which holds the shade in place for operation.
 Wipe unerside of ridge plate clean. Peel off the double-stick tape from velstick, press on and screw velstick underneath lip of ridge plate. Use 7 screws, approximately 5 inches appart, per velstick strip (drill screw holes with 1/8" bit provided).




- Drill holes for shade stops just below each track opening near ridge and brush out shavings.
- If installing from a ladder, rest the rolled-up shade on top to hold it while loading into track. The shipping boxes with sides cut off may make a convenient tray for this.
- Place clamp in track 2 feet down from ridge to keep shade in place during loading.
- Load shade wheels into tracks. Use wheel guides against inside wall of track to ensure proper wheel positioning over raised rib inside of track.
- After loading shade, insert shade stop screws just below each track opening. These will prevent shade from being pulled out of track during operation. Stop location must be the same in each track for every shade.
- Lightly spray each track with silicone provided. Use only pure silicon spray, never use WD-40, Tri-flow, teflon or other lubricants.
- Shades can be gently lowered to sill after removing clamp, until motor tubes are installed. Do Not Let Shades Fall Freely!

And While star and Stop Screw Stop Screw Stop Screw Welstick strip attaches underneath ridge plate. Headrail goes here too.

2: Install the Motor Tubes

- Your installation will have at least one motor tube with accompanying motor and idler end brackets. If using more than one tube, connecting rods with intermediate brackets are also
- Remove plugs from 1" pre-drilled holes in each glazing bar near ridge if not done already.
- Position motor brackets over holes, mark for drilling screw holes, assure all brackets will allign perfectly. Drill holes for bracket screws into glazing bars using 1/8" drill bit. Attach brackets with screws provided.
- Install the tubes. Center all connecting rods between tube assemblies.
- Position motor tube so the power cord is positioned away and to the back of the tube (if desired). Position tubes with connecting rods so the set screw hole on the end caps face out and down for easy access.
- Secure motor end in bracket with cotter pin.
- Use thread locker on set screws in intermediate tube caps, securing tightly with allen wrench provided.

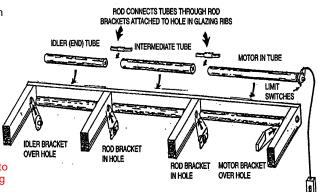



Shade Cords

Do this for every shade in the system...

- Unbundle the cords, draping them over top of shade. Pull top of shade up near the motor tube & place clamp in one of the tracks under top shade glider.
- Starting 12" in from side of glazing bar, wrap each cord 2 times OVER TOP OF MOTOR TUBE toward the center. Pull cords taut around tube so the cord tension is tight but not enough to lift the bottom of shade.







MOTOR TUBE

PULL CORDS

HEADRAIL

OP PLEAT

CLAMP IN SHADE TRACK

Wrap cords twice over tube toward its center

Cord clip - Right side

Rotate clip to tighten cord

- Attach cord clips over wrapped cord. Once attached, you can twist the clip to tighten cord tension if needed. Match tension equally on both cords to minimize later adjustments. Cut off extra cord length hanging from cips.
- Repeat this process for each shade ensuring all cords on all shades have the same tension before operating the motor.
- When finished with one shade remove clamp from track for use with next shade. Do not yet attach velcro on shade to headrail. After finishing with cords of the last shade, put clamp aside.

Initiate Motor Operation

With motor plugged into power: Initiate motor programming by pressing and holding the Up and Down arrow buttons at the same time until the motor "jogs" (a very brief up and down rotation).


ONLY IF MOTOR IS ON THE RIGHT looking up at motor tube: Assign upward rotation direction - Press and hold the "My" (center) button on the remote until motor "jogs". (This programs the upward turn direction if motor is on the right)



• Run motor up to raise shades: Press and hold Up arrow on remote.

Allow motor tube to raise shades with 4-5 revolutions and Stop/release button. If any shades are raising unevenly, adjust cord tension by twisting the cord clips on motor tube appropriately. When bottom of shades are all even, tension is correct. Also note that cords will wrap around tubes away from clips in a telescoping fasion.



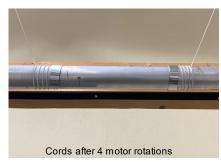

Attach top of shades to velstick on headrails.

Set Motor Upper and Lower Limits

- Continue raising shades with Up arrow button until they reach your desired open (upper) limit and Stop/release button.
 STOP BEFORE shade pleats bundle too tightly at top of room.
- To set this upper limit Press both Down arrow and My (center) button together and release. Shades will begin lowering.

IF SHADES ARE NOT LOWERING EVENLY OR SMOOTHLY, STOP! - Press My button (the My button acts as a stop button). More silicone spray may be needed in tracks. Raise shades back to upper limit, apply more silicone before lowering again. Press both Down arrow and My buttons together and release to repeat.

When shades reach your desired closed (lower) limit, Stop with the My button. Use Up and Down arrow buttons to adjust lower limit.

- To set this lower limit Press both Down arrow and My (center) buttons together and release. Shades will begin raising and will automatically stop at the upper limit.
- To finalize limit settings, Press and hold the My button until the shades "jog".
- Save motor settings: Press and hold the small recessed button on the back of the remote until the motor "jogs" (You will need a small point such as a ball point pen or paper clip to do this). Limits are now in memory.
- The remote and motor are now in "User Mode" and shades can be operated with a brief press of the Up or Down arrow buttons, and shades will automitacally open or close to the programmed limits.

You can always use the My button to stop shades part way.



For These Steps with the Remote Control and Other Functions, please refer to the included "Quick Programming Guide For All RTS" or the Instructions included in the remote contol package.

- Test Drive Raise the shades up and down to confirm upper and lower limits have been set and shades run up and down smoothly and evenly.
- Note: Motors are not able to run continuously up and down for long periods. Once the motor becomes overheated, it will shut down and cannot operate until cooled. The cool down time is at least 10 minutes.